




WALL TREATMENTS & ACOUSTIC PANELS

PRE-FINISHED TAMBOUR, CONCAVE, CONVEX, CONTEMPORARY, & STANDARD SHIPLAP

NEW 2' x 8' & 10' ACOUSTIC WALL PANELS – \$89.95 & \$118.00/Ea

Available in 5 beautiful finishes, easy to Install Acoustic Wall Panels add acoustic comfort* to a room and are perfect for bedrooms, living rooms, home offices, and accent walls anywhere! *Pre-Finished Wood-veneered MDF slats mounted on 9mm premium recycled felt backing provide acoustical dampening within a room. NOTE: Panels absorb echo and reverberation and are part of a through-wall noise reduction solution. On their own, the panels won't completely prevent noise between rooms. 1. Matte Blk 17WPABL8/10, 2. Blk Walnut 17WPABW8/10, 3. Marble 17WPAMA8/10, 4. White Oak 17WPAWO8/10, 5. Satin White 17WPAWH8/10

Dimensions: 24" x 96" & 120". Depth 0.83" (2.1cm), Slat Width 1.06" (27mm), Slat Depth 0.47" (12mm), Between Slats 0.51" (13mm)

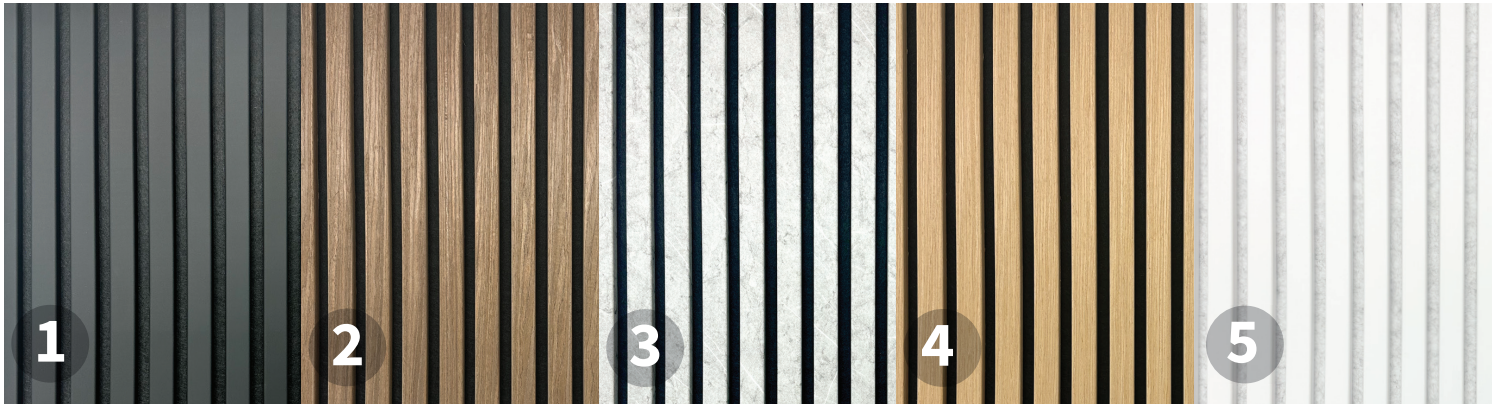

INSTALLATION

The Standard Installation Method:

Step 1: Prepare the wall or ceiling making sure the surfaces are clean and dry, without nails and screws.

Step 2: Measure the height and width of the wall or ceiling.

Step 3: Cut the panels with a circular saw and a knife to the length and width you need.

To place panels on a ceiling, the instructions are the same as on a wall.

Screw the panel to the wall or ceiling racks (wood strips): For wall mounting, we recommend 15 screws of 3 screws per row each panel.

For ceiling, we recommend additionally strengthening the panel by screwing with screws or nailing with a stapler, making at least 3 rows, totalling 45 screws.

The Installation Method for Highest Sound Absorption:

Step 1: Prepare a clean and dry wall or ceiling.

Step 2: We recommend installing a frame, then the sound absorption wool, racks, and then the panels. With this combination, you will get the highest sound absorption.

Step 3: Mount the panel using an electric screwdriver to screw through the black felt into the wooden racks. When assembling in continuation to each other, please note that the felt side of the one panel is seamless with the slat side of the following panel.

The Simple Installation Method:

Slat panels can be mounted directly on the wall with screws or glue.

1. Mounting the panel on the wall with glue.

Firstly, clean the wall surface and make sure it's clear of nails and screws, then measure the wall and panel, and then add structural adhesive to the backing felt of the panel. Finally, mount the panel on the wall.

2. Mounting the panel on the wall with screws.

Firstly, make sure the wall surface is clean and dry, then measure the size of the panel you need, and then mark where the screws will go through. Lastly, screw the panel on the wall directly.